



Standard Towing Head

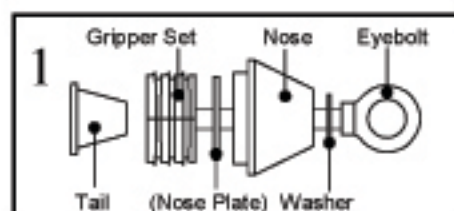


CHECK THE TOWING HEAD CAREFULLY

Make sure the towing head is the correct size.
(Outside diameter and wall thickness).

Brewis Standard Towing Heads fit polyethylene pipe sizes SDR11 to SDR17.6. (Others sizes are made to order).

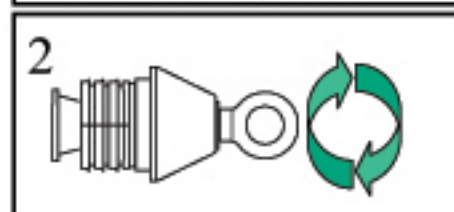


 Before fitting, turn the eyebolt to expand the grippers.
Check :-


The eyebolt turns freely. (Grease if necessary)


The grippers expand until they touch the lip on the tail.


The condition of the rubber O rings.


(Replace if damaged or perished).

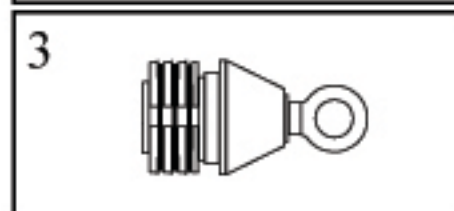


 Undo the eyebolt until the towing head just fits in to the pipe.

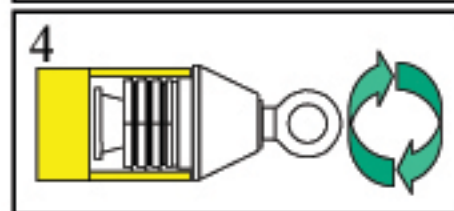



 Slide the towing head fully into the pipe and tighten the eyebolt. Use a tommy bar to tighten, do not hammer the eyebolt around.

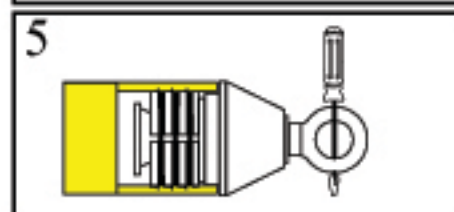


 **To remove the towing head** unscrew the eyebolt a few turns.


If the eyebolt comes out of the nose then gently tap it back in to release the grippers. The towing head should now slide off.

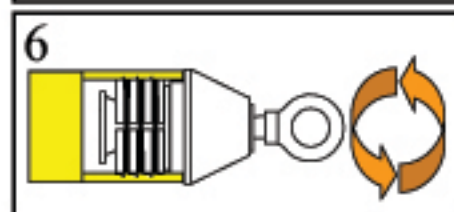

 **If the towing head is stuck then try –**
Tapping the PE pipe behind the nose to release the grippers.

Do not attempt to remove the towing head by
HAMMERING or **PULLING**

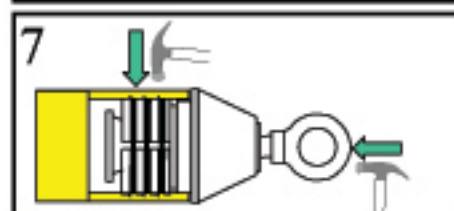

 After use dismantle fully, clean, lubricate and re-assemble.

© Brewis Direct, 2004.

BREWIS ENGINEERING
Design & Manufacturing

Brewis Engineering Limited
Handlemaker Road
Marston Trading Estate

BREWIS DIRECT.com

Frome Somerset BA11 4RW United Kingdom.
Tel. +44 (0)1373 468864 Fax +44 (0)1373 468865 sales@brewisdirect.com www.brewisdirect.com